



# ECOfit-Turf and ECOfit-Turf Plus Rolls Technical Manual

Installation · Maintenance · Warranty

**Manufactured in the U.S.A.**

Revised on 28Feb2023  
Supersedes all previous versions.  
Check website for updates.

<b>Installation</b>	
Job Site Conditions	2
Subfloors	2
Subfloor Requirements and Prep	2
Storage & Handling	3
Roll Installation	3
<b>Cleaning &amp; Maintenance</b>	5
<b>Warranty</b>	7

## INSTALLATION

### I. JOB SITE CONDITIONS

1. Installation should not begin until after all other trades are finished in the area. If job requires other trades to work in area after the installation of the floor, protect floor with an appropriate protective cover.
2. Areas to receive flooring should be weather tight and maintained at a minimum uniform temperature of 65°F (18°C) for 48 hours before, during, and after the installation.

### II. SUBFLOORS

1. ECOsurfaces ECOfit-Turf and ECOfit-Turf Plus sports rolls may be installed over concrete, Portland- based patching and leveling materials, and wood.

**NOTE: The selected Portland-based patching and self-leveling materials must be moisture resistant and rated to withstand the RH moisture levels on the project.**

**NOTE: Gypsum-based patching and leveling compounds are not acceptable.**

2. Wood Subfloors – Wood subfloors should be double construction with a minimum thickness of one inch. The floor must be rigid and free from movement with well-ventilated air space below.
3. Underlayments – The preferred underlayment panel is American Plywood Association (APA) underlayment grade plywood, minimum thickness of 1/4-inch, with a fully sanded face.

**NOTE: Particleboard, chipboard/OSB, Masonite and lauan are not approved underlayments.**

4. Concrete Floors – Concrete shall have a minimum compressive strength of 3000 psi. New concrete slabs should cure for a minimum of 28 days. It must be fully cured and permanently dried.
5. Radiant heat – ECOfit-Turf and ECOfit-Turf Plus Rolls are not suitable over radiant heat.

### III. SUBFLOOR REQUIREMENTS AND PREPARATION

1. Subfloors should be dry, clean, smooth, level, and structurally sound. They should be free of dust, solvent, paint, wax, oil, grease, asphalt, sealers, curing and hardening compounds, alkaline salts, old adhesive residue, and other extraneous materials, according to ASTM F710.
2. Subfloors should be smooth to prevent irregularities, roughness, or other defects from telegraphing through the new flooring. The surface should be flat to the equivalent of 3/16" (4.8 mm) in 10' (3.0 m).
3. Mechanically remove all traces of old adhesives, paint, or other debris by scraping, sanding, or scarifying the substrate. Do not use solvents. All high spots shall be ground level and low spots filled with a Portland-based patching compound.
4. All saw cuts (control joints), cracks, indentations, and other non-moving joints in the concrete must be filled with a Portland-based patching compound.
5. Expansion joints in the concrete are designed to allow for expansion and contraction of the concrete. If a floor covering is installed over an expansion joint, it will likely fail in that area. Use expansion joint covers designed for resilient flooring.
6. Always allow patching materials to dry thoroughly and install according to the manufacturer's instructions. Excessive moisture in patching material may cause bonding problems or bubbling reaction with adhesive.

#### HAZARDS:

**SILICA WARNING** – Concrete, floor patching compounds, toppings, and leveling compounds can contain free crystalline silica. Cutting, sawing, grinding, or drilling can produce respirable crystalline silica (particles 1-10 micrometers). Classified by OSHA as an IA carcinogen, respirable silica is known to cause silicosis and other respiratory diseases. Avoid actions that may cause dust to become airborne. Use local or general ventilation or provide protective equipment to reduce exposure so it's below the applicable exposure limits.

**ASBESTOS WARNING** – Resilient flooring, backing, lining felt, paint, or asphaltic “cutback” adhesives can contain asbestos fibers. Avoid actions that cause dust to become airborne. Do not sand, dry sweep, dry scrape, drill, saw, bead blast, or mechanically chip or pulverize. Regulations may require that the material be tested to determine the asbestos content. Consult the document “Recommended Work Practices for Removal of Existing Resilient Floor Coverings” available from the Resilient Floor Covering Institute.

**LEAD WARNING** – Certain paints can contain lead. Exposure to excessive amounts of lead dust presents a health hazard. Refer to applicable federal, state, and local laws and the publication “Lead Based Paint: Guidelines for Hazard Identification and Abatement in Public and Indian Housing” available from the United States Department of Housing and Urban Development.

7. Moisture must be measured using the RH Relative Humidity test method per the ASTM F2170 test standard. Moisture content should not exceed the allowable limit of the selected adhesive. The selected Portland-based patching and self-leveling materials must be moisture resistant and rated to withstand the RH moisture levels on the project.

- ES-90 – RH limit of 90% – normally selected
- E-Grip 95 – RH limit of 95% – higher RH applications
- E-Grip 99 – RH limit of 99% – highest RH applications

If RH levels exceed the selected adhesive’s RH limit, stop and correct situation.


8. In the event that a moisture mitigation system is required, it must conform to the ASTM F3010 Standard Practice for Two-Component Resin Based Membrane Forming Moisture Mitigation Systems for use Under Resilient Floor Coverings.
9. Perform pH tests on all concrete floors. If greater than the allowable limit of the selected Ecore adhesive, neutralize prior to installation.
10. Adhesive bond tests should be conducted in several locations throughout the area. Glue down 3’ x 3’ test pieces of the flooring with the recommended adhesive and trowel. Allow to set for 72 hours before attempting to remove. A sufficient amount of force should be required to remove the flooring and, when removed, there should be adhesive residue on the subfloor and on the back of the test pieces.

**IV. MATERIAL STORAGE AND HANDLING**

1. Material should be delivered to the job site in its original, unopened packaging with all labels intact.
2. Note: Shipping pallets, cradles, banding, etc. are not intended for storage. After 7 days, remove material from shipping pallets, cradles, etc. Turf roll material should always be stored laying down; storing on end will curl the edges, possibly permanently, which would then require straight edge cutting to remove the curl before installation.
3. Material should only be stored inside on a clean, dry, smooth surface. Rolls should be stored with the end of the roll on top, facing up. The end of the roll should not be positioned against an adjacent roll or surface, or welts may be created on both rolls. Roll material is stretched slightly during the manufacturing process. At the job site, the installer should unroll all rolls and allow to relax allow to relax at least 2 hours, preferably overnight. In some instances, it may be necessary to weigh down the seam until adhesive develops a firm set.
4. **Inspect all materials for visual defects before beginning the installation. No labor claim will be honored on material installed with visual defects. Verify the material delivered is the correct style, color, and amount. Any discrepancies must be reported immediately before beginning installation.**
5. The material and adhesive must be acclimated at room temperature for a minimum of 48 hours before starting installation.

**V. INSTALLATION – ROLL MATERIAL**

1. All ECOfit-Turf and ECOfit-Turf Plus rolls must be unrolled and installed in the same direction. Rolls are labeled with batch numbers and roll numbers. Do not mix batch numbers together and install all rolls in consecutive order. Laying rolls in the opposite direction can cause color variations between the rolls.

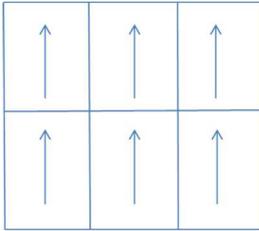

2. Roll material is stretched slightly when it is rolled at the factory. Unroll and allow to relax at least 2 hours, preferably overnight before gluing or cutting material. Shaking material once unrolled can help it to relax.
3. Snap a chalk line where the first seam will be located. Align the first roll's factory edge to the chalk line. Straight edge the second lineal drop if the first lineal drop is not long enough to span the entire length or width of the room. If end or head seams are necessary, they should be staggered on the floor and overlapped approximately 3-6".
4. Position the second roll with no more than a 1/8" overlap over the first roll at the seam (see figure 2). After adhesive is applied to substrate the material will be worked back to eliminate the overlap. This procedure will leave tight seams and eliminate any gaps. Care should be taken to not over compress the seam. Over compressed seams will cause peaking.

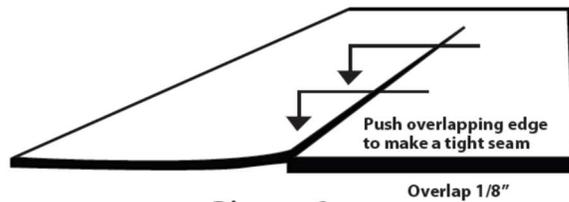


Diagram 2

5. Repeat for each consecutive roll to be installed that day.

## VI. INSTALLATION - GLUE DOWN

1. After performing the above procedures, begin the application of the adhesive. Apply ES-90 to the substrate using a 1/16" square-notched trowel.
2. Fold over the first drop along the wall (half the width of the roll).
3. Spread adhesive, taking care not to spread more ES-90 than can be covered with flooring within 30 minutes. The open time of the adhesive is 30–40 minutes at 70°F and 50% relative humidity.
4. NOTE: Temperature and humidity affect the open time of the adhesive. Temperatures above 70°F and/or relative humidity above 50% will cause the adhesive to set up more quickly. Temperatures below 70°F and/or relative humidity below 50% will cause the adhesive to set up more slowly. The installer should monitor the on-site conditions and adjust the open time accordingly.
5. Fold over second half of first roll and half of second sheet. Spread adhesive. At seam area spread adhesive at 90 degrees to seam to eliminate excessive adhesive oozing up at seam.
6. Carefully lay the material into the wet adhesive. DO NOT let the material drop because this will cause air to be trapped beneath the flooring.
7. Immediately roll the floor with a 75–100 lb. roller to ensure proper adhesive transfer. Overlap each pass of the roller by 50% of the previous pass to ensure the floor is properly rolled. Roll the width first and then the length. Roll again within the first 60 minutes. It may be necessary to weigh down the seams until the adhesive develops a firm set.
8. Continue the process for each consecutive drop. Work at a pace so that you are always folding material back into wet adhesive.
9. **Do not allow adhesive to cure on your hands or come in contact with the finished flooring. We strongly suggest wearing gloves while using adhesive. Immediately wipe off excess adhesive with a rag dampened with mineral spirits or denatured alcohol and wipe off the mineral spirits / denatured alcohol with a rag damp with water.**

**NOTE: Use mineral spirits and denatured alcohol sparingly.**

10. Hand roll all seams after the entire floor has been rolled. If some seams are gapping, hold them together temporarily with blue painter's tape. Do not use duct tape as it may leave a residue on the floor. Remove tape after adhesive has developed a firm set (approximately 2-3 hours).
11. Keep traffic off the floor for a minimum of 24 hours. After installation, floor should be free from rolling loads for a minimum of 48-72 hours. Foot traffic and rolling loads can cause permanent indentations or bond failure in the uncured adhesive.

**MAINTENANCE**

The following procedures are key in helping to preserve your Turf.

I.	<b>Keep it clean</b>
II.	<b>Brush periodically</b>
III.	<b>Do not abuse</b>
IV.	<b>Report any problems promptly</b>

**I. Keep it clean**

1. Dust, pollen, and airborne pollutants

For lightly soiled areas, it may be necessary to use a rectangular microfiber mop with three (3) ounces of E-Cleaner per gallon of water. For heavily soiled areas, repeat procedure using a three (3) percent solution of household ammonia in warm water followed by a thorough rinsing with warm water. A wet vacuum can be used to remove excess water from the surface.

2. Stains and other blemishes

The first rule is promptness. It is always easier to clean up a fresh spill than one that has dried and hardened. Remove any solid or paste-like deposit with a spatula or table knife. Blot up excess liquids with paper towels, a clean cloth, or a dry absorbent, such as kitty litter or fuller's earth. Dry absorbents can then be vacuumed up afterwards.

Synthetic fibers have high resistance to staining. However, it is important to realize they are only one part of a sophisticated system of various components designed for overall performance. Some cleaning agents safe for the face fibers can be harmful to other components of the turf system. Therefore, cleaning agents are grouped into two sets, one of which can be used in liberal amounts directly on the turf surface, and the second of which should only be applied by rubbing a cloth lightly soaked in the cleaner to minimize penetration of possible harmful agents below the turf surface.

In the **first** group of cleaners, which generally can be applied without any special precautions are:

- A warm, mild solution of granular household detergent or any low sudsing detergent for fine fabrics. Use approximately one teaspoon to one pint of water. This will handle most waterborne stains including:

Coffee	Cola	Tea	Blood	
Ketchup	Milk	Ice Cream	Urine	
Mustard	Cocoa	Butter	Dye	
Fruit juices	Vegetable juices	Glue	Latex paint	

- A three (3) percent solution of ammonia in water may be used in lieu of household detergent for more stubborn stains.
- Do not use cleaners that contain chlorine bleaches or caustic cleaners (pH above 9) or highly acidic cleanses (pH below 5). Use only neutral cleaners such as E-Cleaner provided by ECOsurfaces.
- Rinse area thoroughly with clean warm water to remove any traces of soap or ammonia.
- Blot up excessive liquid.

The **second group of cleaners**, where agent must be applied sparingly and care taken to avoid penetration beneath the turf, are:

- Mineral spirits or a grease spot remover like perchlorethylene (dry cleaning solution) of the type sold by most variety stores and supermarkets. In general, cleansers in this category should handle most oil-based stains including:

Asphalt	Motor oil & grease	Chewing gum	Lipstick
Tar	Suntan oil	Crayon	Nail polish
Shoe polish	Cooking oil	Ballpoint ink	Floor wax

**Caution: Mineral spirits and other petroleum-based solvents are flammable. Do not smoke or permit open flames near where these are being used.**

**Be sure the area is well ventilated where solvent cleaners are used and remember to use sparingly.**

3. Animal waste - Neutralize with mixture of white distilled vinegar in an equal amount of water. Flush thoroughly with water after application. And vacuum up excess solution with a wet vacuum.
4. Chewing gum - In addition to dry cleaning fluid, chewing gum can be removed by freezing. Aerosol packs of refrigerant are available from most carpet cleaning suppliers for this purpose, or dry ice can be used. After freezing, scrape with a knife.
5. Fungus or mold spots - A one (1) percent solution of hydrogen peroxide in water can be sponged on to the affected area. Flush thoroughly with clean water after application.

## II. Periodic brushing

1. Matting of fibers may occur in areas of high foot traffic, especially if fibers have become soiled with dirt and other airborne pollutants.
2. Periodic “cross brushing” of the turf can help restore the aesthetic appearance of the turf. “Cross brushing” means all brushing activity takes place against the grain, nap, or sweep of the Turf fibers. By brushing against the turf, the fibers are “fluffed up”. A brush with synthetic bristles should be used. Never use a brush with metal or wire bristles as these will change the turf fibers.

## III. Do not abuse

Although turf is made of tough, durable fibers, certain precautions should be taken to prevent any damage.

- Lighted cigarettes cannot ignite the turf, but they can damage the turf by fusing the tips of the fibers together.
- Furniture and equipment with sharp or jagged edges should not be placed on turf as this may puncture or tear the turf.
- Water from sprinkler systems or hard water areas can leave mineral deposits on turf that may cause discoloration.
- Make sure turf is not exposed to reflected sunlight windows as this may fuse the turf fibers together.

Proper care and maintenance can enhance the aging, usefulness, and aesthetics of your turf.

## WARRANTY

All ECOsurfaces ECOfit-Turf and ECOfit-Turf Plus is guaranteed to be free from manufacturing defects on both material and workmanship. If such a defect is discovered, the customer must notify ECOsurfaces either through the contracting installer, distributor, or directly. If found to be defective under normal non-abusive conditions, at the discretion of ECOsurfaces, the sole remedy against the seller will be to repair, to replace, or to issue a credit not exceeding the selling price of the defective goods. These warranties only apply to the original purchaser.

Please see the ECOsurfaces Warranty Guide for length specifics.

ECOfit-Turf and ECOfit-Turf Plus warranty shall not cover dissatisfaction due to improper installation, normal wear, damage from improper maintenance or usage, or general misuse, including and without limitation: burns, cuts, tears, scratches, scuffs, damage from rolling loads, damage from cleaning products not recommended by ECOsurfaces, slight shade variations or shade variations due to exposure to direct sunlight, or differences in color between samples or photographs and actual flooring.

### I. Items Under Warranty:

1. WEAR – ECOsurfaces warrants that ECOfit-Turf and ECOfit-Turf Plus products will not wear more than 10% of its surface pile weight from abrasive wear during the warranty period. By abrasive wear is meant fiber loss from the wear layer through normal abrasion, not crushing or flattening of the fiber surface pile in any area, nor due to abnormal usage of the fiber surface.
2. EDGE RAVEL – ECOsurfaces warrants that ECOfit-Turf and ECOfit-Turf Plus products will not edge ravel along seams during the warranty period.
3. DELAMINATION – ECOsurfaces warrants that ECOfit-Turf and ECOfit-Turf Plus products will not delaminate during the warranty period of the fiber surface when maintained according to our published procedures. Delamination warranty excludes roll edges that have been modified by cutting and exposed in open areas where not properly protected by an edge molding.

### II. Warranty Exclusions

1. Disfigurement or damage caused by abnormal use or any damage not arising out of a defect to our product. For example, the warranty does not cover tears, burns, cuts, installation on stairs or damage in transit.
2. Differential fading due to light exposure, shading, pile crush, dye lot differences and soiling.
3. Any condition that would have had a visible defect upon inspection prior to installation.
4. Damage from any use for which the product was not designed.
5. The exact matching of shade or color.
6. Any express or implied promise made by any salesman or representative.
7. Tears, burns, cuts or damage due to improper installation, improper use or improper cleaning agents or maintenance methods.
8. Labor costs for installation of original or replacement material.
9. Sale of "Remnants", "Seconds", "Off Goods" or other irregular (non-first quality) flooring materials. With respect to "Seconds", "Off Goods", or "Remnants" such are sold "as is," and ECOsurfaces makes no warranties whatsoever, express or implied with respect thereto, including warranties of merchantability or fitness for a particular purpose.
10. Problems caused by moisture, hydrostatic pressure, or alkali in the sub-floor.
11. Problems caused by uses, maintenance, and installation that are contrary to product's specifications, recommendations or instructions.
12. Material installed outdoors.
13. Material installed with obvious defects.
14. Material that is not installed and maintained as recommended by ECOsurfaces.

15. Damage to flooring products from pallet jack and tow-motor or vehicular traffic.
16. Environments where the product will be exposed to animal fats, vegetable oils, grease or petroleum-based materials. (i.e., commercial kitchens or auto repair facilities.)
17. Premature wear and deterioration from spikes or natural grass cleats.
18. Differences in color between products and photography.

These warranties are in lieu of any other warranty expressed or implied. ECOsurfaces shall not be liable for any incidental or consequential damages which may result from a defect. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. These warranties give you specific rights, and you may also have rights which may vary from state to state. To know what your legal rights are in your state, consult your local or state Consumer Affairs Office or your State Attorney General. For complete and latest warranty information, please see website at [www.ecosurfaces.com](http://www.ecosurfaces.com).



833-888-1760

Manufactured in the U.S.A.

© 2023 All designs and colors are copyrighted by ECOsurfaces